

SUPER WASHER 835

DIRECTIONS FOR USE

QUICK
REFERENCE

1 INSTALLATION

- Remove 3 Shipping Rods on back panel. This releases red tag to free power cord
- Connect Hot & Cold Water hoses (included)
- Plug power cord into a 110V/60Hz outlet
- Insert hose into U-connector and insert into standpipe or over sink 24"-40" high

2 LAUNDRY PREP

- Load clothes in the machine
- Use High Efficiency (HE) detergent, Equator® is recommended - 1 tablespoon
- DELAY START: Press to delay start time up to 24 hours



3 OPERATION

- Press POWER button
- Turn Knob to wash setting - Press START

Cycles	Wash Times	
	Hour	Mins
NORMAL	0	51
Prewash + Heavy	1	15
Heavy	1	01
ECO	0	31
Quick 20	0	20
Baby	0	41
Delicate	0	36
Wool	0	36
Winterize	0	02
Quiet	0	31
Sanitize	1	09
Allergen	0	59

DIAGNOSTIC MENU		
Code	Description	Component
E1	Door close	Door Switch
E2	Drain	Drain Pump
E3	Water inlet	Inlet Valves
E4	Water overflow	Pressure Switch
E5	Motor	Motor +Electronic Module
E7	Washing heater failure	Washing heater
E10	Water level failure	Water level sensor
E16	Communication between display & electronic module	Communication Cable

QUESTIONS / SERVICE

Phone/Text : 1-800-776-3538

Email: Service@ApplianceDesk.com